
INSTRUCTION BOOK

ANTENNA & CABLE MONITOR SERIES ACM



Bird® Electronic Corporation
30303 Aurora Road
Cleveland (Solon), Ohio 44139

Sales & Technical Support:	440-248-1200 866-695-4569 toll free
Sales email:	sales@bird-technologies.com
Technical Support email:	atechapp@bird-technologies.com

©Copyright 2005 by Bird Electronic Corporation
Instruction Book P/N 920-ACM Rev. F
ThruLine® is a registered trademark of
Bird Electronic Corporation

Microsoft® and Windows® are registered
trademarks of the Microsoft Corporation

Safety Precautions

The following are general safety precautions that are not necessarily related to any specific part or procedure, and do not appear elsewhere in this publication. These precautions must be thoroughly understood and applied to all phases of operation and maintenance.

Keep Away From Live Circuits

Operating personnel must at all times observe general safety precautions. Do not replace components or make adjustments to the inside of the test equipment with the high voltage supply turned on. To avoid casualties, always remove power.

Shock Hazard

Do not attempt to disconnect an RF transmission line while RF power is present. Radiated RF power is a potential health hazard.

Do Not Service or Adjust Alone

Under no circumstances should any person reach into an enclosure to service or adjust the equipment, except in the presence of someone who is capable of rendering aid.

Safety Earth Ground

An uninterruptible safety earth ground must be supplied from the main power source to the test instruments. Grounding one conductor of a two conductor power cable is not sufficient protection. Serious injury or death can occur if this grounding is not properly installed.

Resuscitation

Personnel working with or near high voltages should be familiar with modern methods of resuscitation.

Safety Symbols

WARNING

Warning notes call attention to a procedure, which if not correctly performed, could result in personal injury

CAUTION


Caution notes call attention to a procedure, which if not correctly performed, could result in damage to the instrument.



This symbol appears on the equipment indicating there is important information in the instruction manual regarding that particular area.



This symbol appears on the equipment and indicates the requirement for separate collection of discarded electrical and electronic equipment in accordance with the European Union Directive 2002/96/EC. Refer to the Bird web site for more information.

 **NOTE:** Calls attention to supplemental information.

Warning Statements

The following warnings appear in the text where there is danger to operating and maintenance personnel and are repeated here for emphasis.

WARNING

Leaking RF energy is a potential health hazard. Never attempt to connect or disconnect equipment from the transmission line while RF power is being applied. Severe burns, electrical shock, or death can occur.

WARNING

Do not touch the center conductor of the power monitor port while RF power is being applied.

WARNING

Disconnect the unit from the RF power source and the ac line before any disassembly. The potential for electrical shock exists.

WARNING

Shock hazard. Remove ac power before attempting to service the equipment.

Caution Statement

The following equipment cautions appear in the text where equipment is in danger of damage and are repeated here for emphasis.

CAUTION

Do not use harsh or abrasive detergents for cleaning.

CAUTION

The +15V supply should only be used to power the ACM Panel.
Do not connect anything else to the power supply.

Safety Statements



USAGE

ANY USE OF THIS INSTRUMENT IN A MANNER NOT SPECIFIED BY THE MANUFACTURER MAY IMPAIR THE INSTRUMENT'S SAFETY PROTECTION.

USO

EL USO DE ESTE INSTRUMENTO DE MANERA NO ESPECIFICADA POR EL FABRICANTE, PUEDE ANULAR LA PROTECCIÓN DE SEGURIDAD DEL INSTRUMENTO.

BENUTZUNG

WIRD DAS GERÄT AUF ANDERE WEISE VERWENDET ALS VOM HERSTELLER BESCHRIEBEN, KANN DIE GERÄTESICHERHEIT BEEINTRÄCHTIGT WERDEN.

UTILISATION

TOUTE UTILISATION DE CET INSTRUMENT QUI N'EST PAS EXPLICITEMENT PRÉVUE PAR LE FABRICANT PEUT ENDOMMAGER LE DISPOSITIF DE PROTECTION DE L'INSTRUMENT.

IMPIEGO

QUALORA QUESTO STRUMENTO VENISSE UTILIZZATO IN MODO DIVERSO DA COME SPECIFICATO DAL PRODUTTORE LA PROZIONE DI SICUREZZA POTREBBE VENIRNE COMPROMESSA.



SERVICE

SERVICING INSTRUCTIONS ARE FOR USE BY SERVICE - TRAINED PERSONNEL ONLY. TO AVOID DANGEROUS ELECTRIC SHOCK, DO NOT PERFORM ANY SERVICING

UNLESS QUALIFIED TO DO SO.

SERVICIO

LAS INSTRUCCIONES DE SERVICIO SON PARA USO EXCLUSIVO DEL PERSONAL DE SERVICIO CAPACITADO. PARA EVITAR EL PELIGRO DE DESCARGÉAS ELÉCTRICAS, NO REALICE NINGÚN SERVICIO A MENOS QUE ESTÉ CAPACITADO PARA HACERLO.

WARTUNG

ANWEISUNGEN FÜR DIE WARTUNG DES GERÄTES GELTEN NUR FÜR GESCHULTES FACHPERSONAL.

ZUR VERMEIDUNG GEFÄHRLICHE, ELEKTRISCHE SCHOCKS, SIND WARTUNGSARBEITEN AUSSCHLIEßLICH VON QUALIFIZIERTEM SERVICEPERSONAL DURCHZUFÜHREN.

ENTRETIEN

L'EMPLOI DES INSTRUCTIONS D'ENTRETIEN DOIT ÊTRE RÉSERVÉ AU PERSONNEL FORMÉ AUX OPÉRATIONS D'ENTRETIEN. POUR PRÉVENIR UN CHOC ÉLECTRIQUE DANGEREUX, NE PAS EFFECTUER D'ENTRETIEN SI L'ON N'A PAS ÉTÉ QUALIFIÉ POUR CE FAIRE.

ASSISTENZA TECNICA

LE ISTRUZIONI RELATIVE ALL'ASSISTENZA SONO PREVISTE ESCLUSIVAMENTE PER IL PERSONALE OPPORTUNAMENTE ADDESTRATO. PER EVITARE PERICOLOSE SCOSSE ELETTRICHE NON EFFETTUARRE ALCUNA RIPARAZIONE A MENO CHE QUALIFICATI A FARLA.

About This Manual

This manual covers the Bird Antenna & Cable Monitor. A sample model number and table listing the available options is provided at the end of this section. The example shows the model number for a 470 – 960 MHz ACM with male 7/16 input, female N output, female TNC monitor ports, and requiring a low voltage power supply.

The instruction book is arranged so that essential information on safety is contained in the front of the book. Reading the Safety Precautions Section before operating the equipment is strongly advised. The remainder of the manual is divided into Chapters and Sections. A general overview at the beginning of each chapter describes its contents.

Chapter Layout

Introduction — Identifies the parts and functions of the ACM.

Theory of Operation — Describes the ACM's alarm options.

Installation — Provides instructions for installing the ACM at a site, as well as detailed information on the cable connections.


Operating Instructions — Explains computer commands for controlling the ACM and describes operation of the optional PCTool software.

Maintenance — Lists routine maintenance tasks for the ACM, as well as troubleshooting information for common problems. Specifications and parts lists are also included.

Changes to This Manual

We have made every effort to ensure this manual is accurate. If you should discover any errors, or if you have suggestions for improving this manual, please send your comments to our Solon, Ohio factory. This manual may be periodically updated. When inquiring about updates to this manual refer to the part number and revision level on the title page.

Sample Model ACM-M-DMNFTL
470 – 960 MHz ACM with male 7/16 input, female N output,
female TNC monitor ports, requiring a low voltage power supply

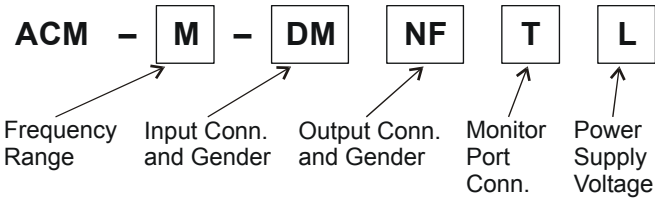

Frequency Range (MHz)	RF Connectors		Monitor Port Connectors		Power Supply Voltage
L0 108 – 138	NM	Male N	N	Female N	L +11 to +26 Vdc
L1 136 – 225	NF	Female N	T	Female TNC	H ± (36 to 72) Vdc
L2 225 – 520	DM	Male 7/16 DIN	B	Female BNC	
M 470 – 960	DF	Female 7/16 DIN			
H 960 – 2400					

Table of Contents

Safety Precautions	i
About This Manual	v
Introduction	1
Features	1
Items Supplied	2
Optional Accessories	2
Component Description	3
Panel Mount	4
Theory of Operation	7
Alarm Response	7
Alarm Reset	7
Alarm Latching	7
VSWR Alarm	7
Alarm on Zero Power	8
High Power Alarm	8
Low Power Alarm	8
Installation	9
Unpacking and Inspection	9
Mounting	9
Cable Connections	10
Power/Alarm Connector	10
RS-232 Connector	12
Panel Mount	13
Installation	13
Power Supply	13
RS-232 Port Setup	14
PCTool Software	14
Computer Requirements	14
Operating Instructions	15
PCTool Software	15
Main Screen	15
Com Settings	16
Alarm Options	16

Terminal Commands	20
“T”	20
“C”	20
“A”	20
Maintenance	21
Inspection and Cleaning	21
Troubleshooting	21
Panel Mount Wiring	22
Customer Service	24
Replacement Parts	24
Specifications	25

The Bird Antenna & Cable Monitor is the solution for monitoring transmission antenna systems. Service providers and end users can rely on it to keep their critical sites up and running. Designed to detect antenna and cable faults that transmitter-internal VSWR monitors may not detect, it also provides accurate in-line power measurement functionality.

Features

- Measures forward and reflected power as well as VSWR and Return Loss.
- Measures true average power of pulses with high peak-to-average ratios - works with any modulation!
- Worldwide systems include Tetra, Cellular, and PCS with digital or analog modulation. Other applications include 3G, AMPS, Broadcast, CDMA, CDMA 2000, DCS, EDGE, Government, GPRS, GSM, iDEN, Industrial, NPSPAC, Microwave, Military, Paging, Public Safety, Rail, SMR, TDMA, Tetrapol, Trunking, UHF, Utilities, VHF, W-CDMA, and WLL
- When monitoring transmitter output power, alarms available for low or high power.
- Accurately monitors antenna and cable system VSWR. Alarm triggered if antenna or cable fails.
- Integral coupler measures small changes in VSWR through high feeder and interface losses. High directivity maximizes measurement accuracy.
- Sampling ports allow signal measurements without requiring system downtime.
- Excellent passive intermod allows the unit to be inserted into multichannel systems with a single Tx/Rx antenna with no desensing or degradation of receiver performance.

- Can be rack mounted at the output of transmitter combiner or linear power amplifier.
- Local or remote setup and operation via RS-232 port and PCTool software. (For other telemetry options, such as TCP/IP, contact the factory)

**Items
Supplied**

- ACM Unit
- Instruction Manual

**Optional
Accessories**

Refer to “Replacement Parts” on page 24 for part numbers of accessories.

Digital Display: Displays the ACM status and provides a low voltage (+15 Vdc) power supply. Includes a power cord and 50 foot, 9 pin and 15 pin cables.

PCTool Software: PC software for data display, alarm monitoring, and setting alarm options

Rack Mount: Allows two units to be mounted in a standard (2U) panel mount. Available with and without a low voltage (+15 Vdc) power supply.

DB-15 Power/Alarm Cables: Connects the Antenna Monitor to a power supply and to external controllers. 50 feet long with male/female connectors. Refer to Figure 3 on page 11 for pin layout.


DB-15 Interface Connector: Allows easy custom data cable connections to the ACM.

DB-15 Surge Protector: Surge protector for DB-15 Power/Alarm connector. Compatible with all low voltage ACM models.

9 pin RS-232 PC Interface Cables: Connects the Antenna Monitor to a PC. Available in either 10 or 50 foot lengths, with male/female connectors. Refer to Figure 4 on page 12 for pin layout.

Component Description

Figure 1
Antenna &
Cable
Monitor
Outline

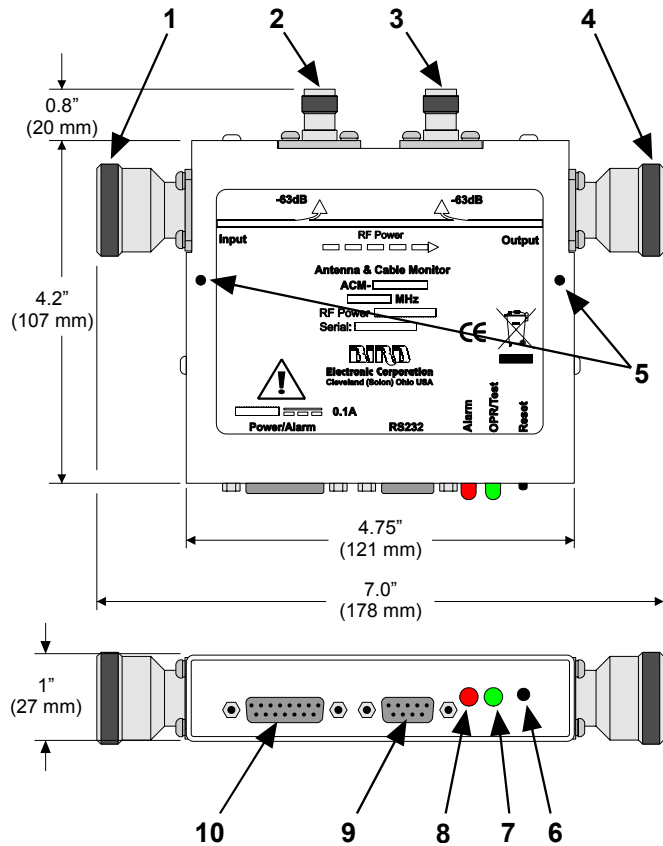


- | | | |
|-----|----------------------------------|--|
| 1. | RF Input | Connect to the amplifier or combiner |
| 2. | Forward Monitor Port | Samples the forward travelling wave |
| 3. | Reflected Monitor Port | Samples the reflected wave |
| 4. | RF Output | Connect to the antenna or feeder |
| 5. | Mounting Holes | Four holes, two top and two bottom, for positioning the ACM on a rack. Supplied with 4-40 screws, will fit M3 holes. |
| 6. | Reset Switch | Press to reset the alarm. If an alarm trigger is still present, the alarm will reactivate |
| 7. | Operation/Test LED | Green LED that lights when the unit is powered |
| 8. | Alarm LED | Red LED that lights when an alarm is triggered |
| 9. | RS-232 Serial Port | Interface with a PC using a male 9 pin RS-232 cable |
| 10. | Power/Alarm Parallel Port | Connects to the power supply using a male 15 pin cable. Also used for remote operation. |

Panel Mount

The Panel Mount Kit allows up to two ACMs to be installed in a standard (2U) panel mount. They are secured with locator holes and a velcro strap. Power is provided through 15-pin parallel cables, connected to a terminal strip at the factory. The ACM-RACKU includes a +15V power supply, while the ACM-RACK requires a 48V customer-provided power supply. Figure 2 lists dimensions and highlights important components.

Figure 2
Panel Mount
Outline

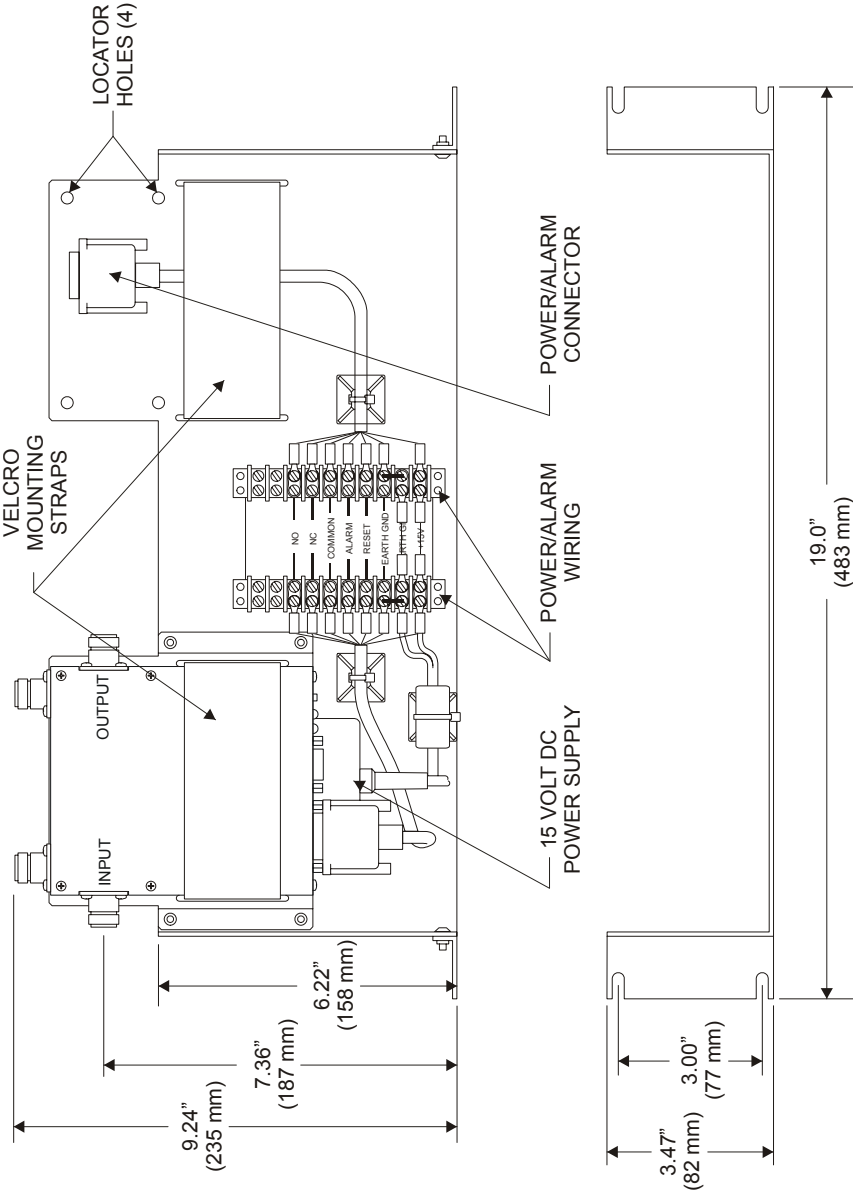

Alarm Response When an alarm is triggered, the Bird Antenna & Cable Monitor turns on the alarm LED and activates a Form C dry contact relay.

The alarm relay defaults to fail/safe. That is, the alarm activates when the relay is not energized or power is lost. However, the PCTool software can configure the alarm to either energize or de-energize in response to an alarm.

Alarm Reset

- Alarms can be reset locally with the reset switch.
- Alarms are reset when the reset pin on the Power/Alarm port is activated by a TTL compatible logic low signal (0 to 0.8 Vdc).
- The PCTool can reset the unit through the RS-232 port by sending a “Reset Alarm” command.

Alarm Latching The alarm defaults to latching operation. In this mode, the alarm will stay active until reset. In non-latching mode, the alarm will reset automatically about forty seconds after the trigger condition is corrected.

VSWR Alarm The ACM continuously monitors forward and reflected power. From the power measurements, the VSWR is calculated and compared to the allowed maximum (default of 1.5 to 1). Based on the results of the comparison, possible actions include:

- No alarm is activated if the VSWR is less than the maximum, or if the VSWR alarm is disabled.
- If the VSWR is equal to or slightly greater than the maximum, additional measurements are accumulated to determine a trend. If reverse power is increasing, an alarm is triggered. If the reverse power is stable, measurements continue

until a trend is established. An alarm will be triggered if the VSWR exceeds the maximum for more than thirty seconds.

- If the VSWR is much greater than the maximum then an alarm condition is triggered immediately.

**Alarm on
Zero Power**

When the forward power is very small ($< 2.5\%$ of full scale), the measured VSWR becomes large due to the noise floor of the sensor. Under these conditions, the VSWR level is meaningless. When the zero power alarm is disabled, the VSWR will not be monitored at these low powers.

**High Power
Alarm**

When the high power alarm is enabled, the forward power is continuously monitored. The alarm trigger is a percentage of the Monitor's full scale power, from 0 – 125%. If the forward power is greater than the trigger level, an alarm is triggered.

**Low Power
Alarm**

When the low power alarm is enabled, the forward power is continuously monitored. The alarm trigger is a percentage of the Monitor's full scale power, from 0 – 125%. If the forward power is less than the trigger level, an alarm is triggered.

This chapter provides information for preparing the Bird Antenna & Cable Monitor for use.

Unpacking and Inspection

1. Carefully inspect the shipping container for signs of damage. If damage is noticed, do not unpack the unit. Immediately notify the shipping carrier and Bird Electronic Corporation.
2. If the shipping container is not damaged, unpack the unit. Save the packing material in case the unit needs to be shipped again.
3. Inspect all of the components for visible signs of damage. Immediately notify the shipping carrier and Bird Electronic Corporation of equipment damage or missing parts.

The Bird ACM is shipped complete and ready for use upon receipt. After unpacking and inspecting the unit, it is ready to be installed.

WARNING

Leaking RF energy is a potential health hazard. Never attempt to connect or disconnect equipment from the transmission line while RF power is being applied. Severe burns, electrical shock, or death can occur.

Mounting

Mount the ACM in the feeder line between the combiner and the antenna. Make sure that the alarm LED and reset button are accessible, and that the connecting cables have proper clearance.

Cable Connections


When connecting the Bird ACM to RF power, use 50 ohm coaxial cable suitable for the frequency and power level of operation. The cable connector should mate with the connector on the unit.

Connect the amplifier or combiner to the Monitor's input. Connect the antenna or feeder to the output.

WARNING

Do not touch the center conductor of the power monitor ports while RF power is being applied.

To monitor the RF waveform, connect the forward and reflected power monitor ports to an appropriate power sensor or meter.

 **NOTE:** If a power monitor port is not being used, terminate it with a 50Ω load.


Power/ Alarm Connector

The Power/Alarm connector provides operating power to the ACM. Pin numbers and descriptions are given in Figure 3.

Low voltage models (ACM-x-xxxxxL) require a +11 to +26 Vdc (+15 V nominal) @ 0.1 A power supply.

High voltage models (ACM-x-xxxxxH) require 36 to 72 Vdc (48 V nominal) @ 0.1 A. Either terminal (10 or 11) may be connected to DC input ground, as dictated by the power supply requirements.

Figure 3
DB-15
Power/
Alarm
Connector

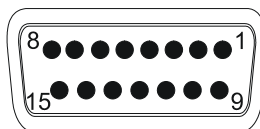


Pin	Description
1	Relay, normally closed contact (closed when relay is not energized) (open when there is no alarm)
2	Relay, common contact
3	TTL compatible alarm, 0 to ≥ 4.0 Vdc with a 10k load when the alarm is active
4	Internal connection
5	TTL compatible reset, 0 to +0.8 Vdc resets alarm
6-8	Internal connection
9	Relay, normally open contact (open when relay is not energized) (closed when there is no alarm)
10	DC input, 36 to 72 Vdc, + terminal (ACM-x-xxxxxH models only)
11	DC input, 36 to 72 Vdc, – terminal (ACM-x-xxxxxH models only)
12-13	DC input, +11 to +26 Vdc (ACM-x-xxxxxL models only)
14-15	DC input and signal ground

**RS-232
Connector**

The RS-232 connector carries ASCII data between the Antenna Monitor and a display panel or PC. If a PC is connected to the display front panel, it is also routed to this connector. Pin numbers and connection descriptions are given in Figure 4.

Figure 4
DB-9
RS-232
Connector

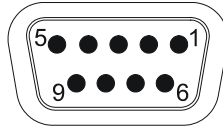

Pin	Description
1	Carrier Detect, always > +5 Vdc
2	Transmit Output, RS-232 data signal
3	Receive Input, RS-232 data signal
4	Data Set Ready Input, connected but not used
5	Data Signal Ground
6	Data Terminal Ready Output, connected but not used
7	Clear-To-Send, shorted internally to Ready-To-Send
8	Ready-To-Send, shorted internally to Clear-To-Send
9	Ring Indicator, no connection

Panel Mount

WARNING

Disconnect the unit from the RF power source and the ac line before any disassembly. The potential for electrical shock exists.

CAUTION

The +15V supply should only be used to power the ACM Panel.
Do not connect anything else to the power supply.

Installation To install a Bird Antenna Monitor in the panel mount, follow these instructions (Refer to Figure 2 on page 5):

1. Unbuckle the velcro strap and move the power/ alarm connector out of the way.
2. Place the ACM on the panel so that the screws on the bottom of the Monitor fit into the locator holes on the panel. The ACM should lock into place.
3. Use the strap to secure the ACM.
4. Plug the power/alarm connector into the power/ alarm parallel port on the ACM.
5. Make RF and RS-232 connections as described in this chapter.

Power Supply The ACM–RACKU includes a +15 Vdc supply already connected to the terminal strip.

The ACM–RACK requires a customer-provided power supply. Connect the supply according to the manufacturer's instructions (see "Panel Mount Wiring" on page 22 for details on the panel wiring configuration).

RS-232 Port Setup

The RS-232 port is configured for 9600 baud, 8 data bits, 1 stop bit and no parity. This configuration is fixed in the firmware and cannot be modified. Operate the serial interface as follows:

- Connect the Bird Antenna Monitor to the computer's serial port with a DB-9 cable. *Do not use a null modem adapter.* The port is configurable from within the PCTool software.
- To use the Bird PCTool software, install it on the computer and start the application. Refer to "PCTool Software" on page 15 for information about using the program.
- To use a terminal program, configure it for 9600 baud, 8 data bits, 1 stop bit, no parity, and no handshake. Set the preferences so that echo is off and line feeds are not appended to output transmission. The commands available are detailed in "Terminal Commands" on page 20.

PCTool Software

Computer Require- ments

The Bird PCTool software will run on any computer running Windows NT or Windows 95/98/2000. To install and run the program, your computer system must meet or exceed the requirements listed below:


486 or better CPU (66 MHz or better recommended)
1 MB of free memory
Hard Disk Drive
CD-ROM Drive

Follow the instructions on the CD provided to install the software.

PCTool Software

Main Screen The PCTool communicates with and configures the Bird Antenna & Cable Monitor. It displays forward and reverse power along with VSWR, return loss, match efficiency and transmitted power. Figure 5 shows a sample of the display screen. Refer to the software “Help” file for specific instructions.

Figure 5
Sample
Display

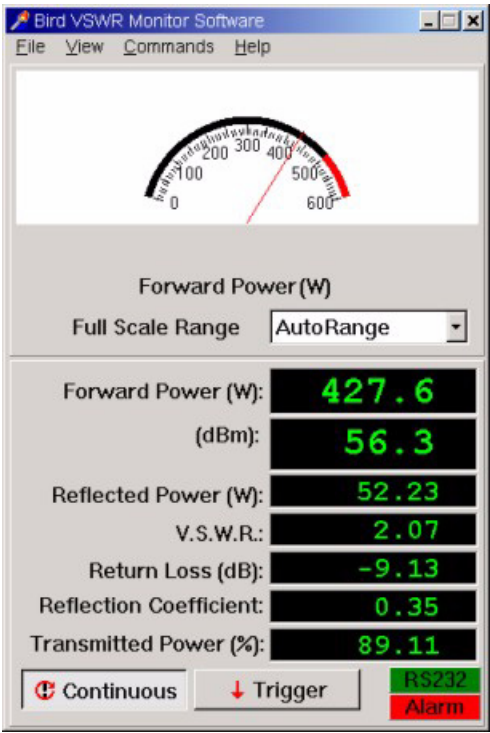

The main screen has two buttons at the bottom, “Trigger” and “Continuous”. Clicking on these will trigger readings. “Trigger” will display a single reading, while “Continuous” will take a new reading every second.

Com Settings


The PCTool software must be set to use the correct Com Port to communicate with the Antenna Monitor. The default is Com Port 1. To change the Com Port, select the correct one from the “View>Comm Port” menu, shown in Figure 6 below.

Figure 6
Com Menu

**Alarm Options**

Three alarms can be configured from the software. All alarms are configured from the “View>Options” menu, shown in Figure 7 below.


- High VSWR: Calculated VSWR exceeds a setpoint.
- High Forward Power: Measured power exceeds a setpoint.
- Low Forward Power: Measured power is less than a setpoint.

 **NOTE:** Some models are not equipped with all alarm variations.

Master Alarm Enable: allows the alarms to work. When this checkbox is *unchecked*, all alarms will be disabled. When it is *checked*, the VSWR alarm will automatically be enabled while “Alarm on Zero Power”, “High Power Alarm”, and “Low Power Alarm” will be on or off depending on their checkboxes.

Relay Energized on Alarm: The energized state of the relay can be set. When this checkbox is unchecked, the relay will be de-energized when an alarm is detected and energized when there is no alarm. With this setting, the alarm is fail-safe. When it is checked, the relay will be energized when an alarm is detected and de-energized when there is no alarm.

Figure 7
Options
Menu

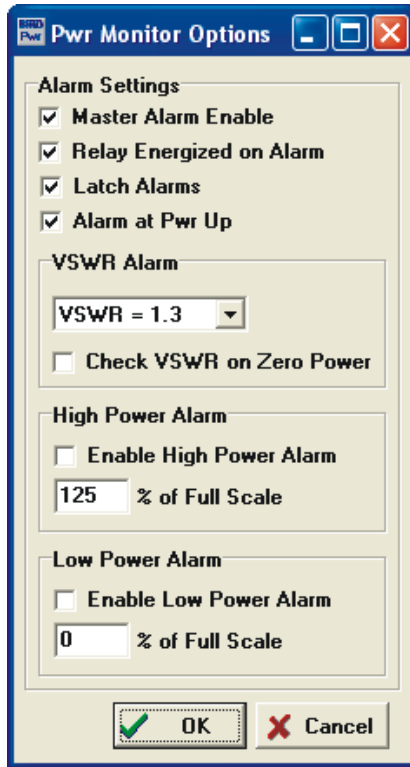

Latch Alarms: Sets whether the alarm will reset automatically in the absence of an alarm condition. When this checkbox is *unchecked*, if an alarm trigger is corrected the alarm will reset after a forty second delay. When it is *checked*, the alarm must be manually reset.

Alarm at Power (Pwr) Up: At power up, before the instrument is ready to take measurements, the microcontroller resets the circuitry to the default condition and then performs internal initialization tasks (such as memory test, hardware setup, and reading EEPROM parameters). *Check* the Alarm at Pwr Up box to have the alarm relay set (enabled) during the microcontroller initialization time. This is

the default setting. *Uncheck* the Alarm at Pwr Up box to disable the alarm during the microcontroller initialization time.

🔧 NOTE: When the Alarm at Pwr Up feature is disabled, the alarm relay may set for a few milliseconds during initialization. To avoid this, install the circuit shown below.

VSWR Alarm: adjustable from 1.3 to 2.5 by increments of 0.1. To allow the VSWR alarm to trigger even at low forward power ($< 2.5\%$ of full scale power), check the “Alarm on Zero Power” checkbox.

While the VSWR trip point can now be set out to 2.5, the instrument cannot always measure VSWR above 1.9. This is due to the large amount of reflected power caused at higher VSWRs. The maximum VSWR that can be physically measured is determined by the full scale ratio of the forward and reflected detectors. This ratio is 10:1. The maximum measurable VSWR occurs when the reflected channel is near its limit. The following table shows the maximum possible VSWR measurement as a function of percentage of full scale forward input power. Use this table as a guide to determine the VSWR trip point.

Percentage Full Scale	Max VSWR
50%	3.00
55%	2.82
60%	2.68
65%	2.56
70%	2.46
75%	2.38
80%	2.31
85%	2.24
90%	2.19
95%	2.14
100%	2.09

High Power Alarm: adjustable from 0 to 125% of the ACM's full scale power. The alarm setpoint is entered as the % of full scale. For example, if you have a 100W full scale unit and would like an alarm when the forward power exceeds 75 W, the alarm setpoint would be $75/100 \times 100$ or 75%. Enter "75" into the data field and check the "Enable High Power Alarm" checkbox.

Low Power Alarm: set in the same way as the High Power Alarm, however this alarm will trigger when the forward power is *less than* the alarm setpoint.

Terminal Commands

There are three commands which can be sent when the Bird Antenna Monitor is connected to a terminal.

“T” The “T” command will cause the unit to echo a single measurement. The format is:

nnn.n,nn.nnXX<CR><LF>

That is, three digits of forward power, a decimal point, a fourth digit of forward power, a comma, followed by two digits of reverse power, a decimal point, and two digits of reverse power.

The first character following will be “A” if an alarm has been triggered until the alarm is reset, and will be blank if there is no alarm. The second character will be “0” if “Alarm on Zero Power” is disabled, and “1” if “Alarm on Zero Power” is enabled.

“C” The “C” command will cause the unit to echo measurements repeatedly. The format is identical to the “T” command. The “C” command can be interrupted at any time by sending the “T” command.

“A” The “A” command will reset the alarm. If an alarm condition is still present, the alarm will turn back on after being reset.

Chapter 5

Maintenance

This chapter contains troubleshooting instructions, part information, and specifications for the Bird Antenna & Cable Monitor.

Inspection and Cleaning

This unit requires only simple and routine maintenance.

CAUTION

Do not use harsh or abrasive detergents for cleaning.

WARNING

Disconnect the unit from the RF power source and the ac line before any disassembly. The potential for electrical shock exists.

1. Wipe off dust and dirt regularly. Use a soft, clean cloth dampened with mild detergent.
2. Check connectors, connector pins, and cables for damage. If needed, clean the connectors using a self-drying contact cleaner that leaves no residue.

Troubleshooting

The Bird Antenna Monitor has no operator serviceable parts. Any required service must be performed at an authorized service facility.

The table below contains troubleshooting information for problems which can occur during normal operation. This manual cannot list all malfunctions that may occur, or their corrective actions. If a problem is not listed or is not corrected by the listed actions, notify a qualified service center.

PROBLEM	POSSIBLE CAUSE	CORRECTION
Operation/Test LED does not illuminate	No dc power	Check power source
	Defective LED	Return the unit to an authorized service center
Alarm LED does not illuminate	Defective LED	Return the unit to an authorized service center
High VSWR	Dirty connectors	Clean connectors
	Defective connectors	Replace connectors
	Shorted or open transmission line	Have the line serviced.

Panel Mount Wiring

The power/alarm connectors for the Bird ACM Panel Mount are provided wired to the terminal strips. Figure 8 and Figure 9 show the wiring schematics for 15V and 48V, respectively.

WARNING

Shock hazard. Remove ac power before attempting to service the equipment.

CAUTION

The +15V supply should only be used to power the ACM Panel. Do not connect anything else to the power supply.

Note the following, which apply to both panel styles:

- The top two terminals are not used.
- For either model, the power/alarm connector is wired identically on both terminal strips.
- The 15V and 48V connectors have different connection callouts. Be sure to use the correct wiring schematic for your model.

Figure 8
15V Wiring
Schematic


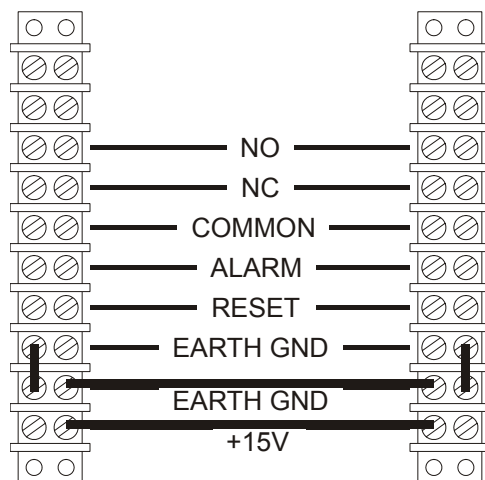


Figure 9
48V Wiring
Schematic

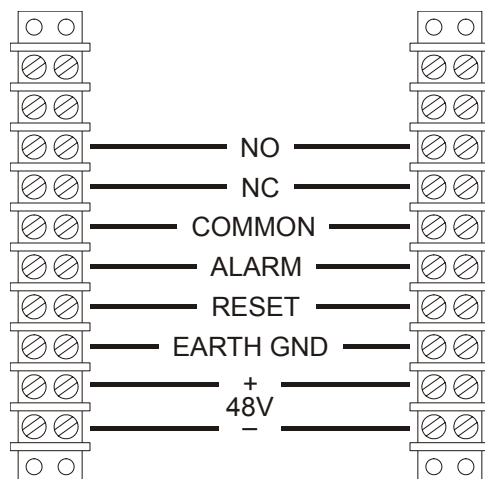

Customer Service

Any maintenance or service procedure beyond the scope of those provided in this chapter should be referred to a qualified service center.

If you need to return the unit for any reason, contact the Bird Service Center for a return authorization. All instruments returned must be shipped prepaid and to the attention of Bird Service Center.

Bird Service Center

30303 Aurora Road
Cleveland (Solon), Ohio 44139-2794
Phone: +1 440 519-2298
Fax: +1 440 519-2326
E-mail: bsc@bird-technologies.com

For the location of the Sales Office nearest you, give us a call or visit our Web site at:

<http://www.bird-electronic.com>

Replacement Parts

Description	Part Number
Instruction Manual	920-ACM
PCTool Software	7005A970
Rack Mount Kit	
With 15Vdc power supply	ACM-RACKU
Without power supply	ACM-RACK
9 pin RS-232 Interface Cable	
50 ft.	5A2264-09-MF-50
10 ft.	5A2264-09-MF-10
DB-15 Interface Cable, 50 ft., male/female	5A2264-15-MF-50
DB-15 Surge Protector	ACM-SS15
DB-15 Interface Connector	SUBCON-15/M-SH

Specifications

Frequency Range

ACM-L0-xxxxxx	108 – 138 MHz
ACM-L1-xxxxxx	136 – 225 MHz
ACM-L2-xxxxxx	225 – 520 MHz
ACM-M-xxxxxx	470 – 960 MHz
ACM-H-xxxxxx	960 – 2400 MHz

RF Power Range

ACM-L0-xxxxxx	5 - 200 W
All Other models	2.5 – 100 W

Accuracy

At calibration frequency	± 5% of reading, ± 1 count
At band endpoints	
ACM-L0	± 8%
ACM-L1	± 10%
ACM-L2	± 8%
ACM-M	± 5%
ACM-H	± 5%

Insertion Loss, Max.

108 – 960 MHz	0.1 dB
960 – 2400 MHz	0.15 dB

VSWR, Max.

N Connectors:	
108 – 960 MHz	1.07:1
960 – 2400 MHz	1.1:1
7/16 DIN Connectors:	
108 – 960 MHz	1.07:1
960 – 2000 MHz	1.1:1
2000 – 2400 MHz	1.2:1

Directivity, Min.

108 – 960 MHz	30 dB
960 – 2400 MHz	26 dB

VSWR Alarm Setpoint

1.3:1.0 to 2.5:1.0 by 0.1:1.0 steps
Refer to “VSWR Alarm” on page 18 for information about power limitations.

Alarm Relay	Dry, form C. Common, normally open, and normally closed contacts
Relay Contact Rating	100 Vdc @ 0.5 A
Visual Alarm	Red LED will light to indicate an alarm
Alarm Stimulus	VSWR setpoint exceeded, response time proportional to overload
Alarm Reset	Local mechanical reset switch Remote input (Reset if Vdc = 0 to +0.8 V)
RF Connectors	Male or Female, N or 7/16 DIN
Monitor Port Connectors	Female N, TNC, or BNC
Monitor Port Coupling	−63 dB nominal
Passive Intermodulation Products	< −130 dBc
RS-232 Serial Port	
Connector	Female DB-9
Protocol	RS-232, 9600 baud, no parity, 8 data bits, 1 stop bit, no handshake
Power/Alarm Parallel Port	Male DB-15 connector
Power Requirements	
ACM-x-xxxxxL	+11 to +26 Vdc @ 0.1 A
ACM-x-xxxxxH	± (36 to 72) Vdc @ 0.1 A
Temperature	
Operating	0 to 50 °C (32 to 122 °F)
Storage	−20 to +80 °C (−4 to +176 °F)
Altitude, Max.	3000 m (10,000 ft.)
Humidity, Max.	95% non-condensing
Dimensions, Nominal, without connectors	4.6" L x 4.8" W x 1.2" H (117 x 122 x 30 mm)
Weight, Max.	2 lbs. (0.9 kg)

Limited Warranty

All products manufactured by Seller are warranted to be free from defects in material and workmanship for a period of one (1) year, unless otherwise specified, from date of shipment and to conform to applicable specifications, drawings, blueprints and/or samples. Seller's sole obligation under these warranties shall be to issue credit, repair or replace any item or part thereof which is proved to be other than as warranted; no allowance shall be made for any labor charges of Buyer for replacement of parts, adjustment or repairs, or any other work, unless such charges are authorized in advance by Seller.

If Seller's products are claimed to be defective in material or workmanship or not to conform to specifications, drawings, blueprints and/or samples, Seller shall, upon prompt notice thereof, either examine the products where they are located or issue shipping instructions for return to Seller (transportation-charges prepaid by Buyer). In the event any of our products are proved to be other than as warranted, transportation costs (cheapest way) to and from Seller's plant, will be borne by Seller and reimbursement or credit will be made for amounts so expended by Buyer. Every such claim for breach of these warranties shall be deemed to be waived by Buyer unless made in writing within ten (10) days from the date of discovery of the defect.

The above warranties shall not extend to any products or parts thereof which have been subjected to any misuse or neglect, damaged by accident, rendered defective by reason of improper installation or by the performance of repairs or alterations outside of our plant, and shall not apply to any goods or parts thereof furnished by Buyer or acquired from others at Buyer's request and/or to Buyer's specifications. Routine (regularly required) calibration is not covered under this limited warranty. In addition, Seller's warranties do not extend to the failure of tubes, transistors, fuses and batteries, or to other equipment and parts manufactured by others except to the extent of the original manufacturer's warranty to Seller.

The obligations under the foregoing warranties are limited to the precise terms thereof. These warranties provide exclusive remedies, expressly in lieu of all other remedies including claims for special or consequential damages. SELLER NEITHER MAKES NOR ASSUMES ANY OTHER WARRANTY WHATSOEVER, WHETHER EXPRESS, STATUTORY, OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS, AND NO PERSON IS AUTHORIZED TO ASSUME FOR SELLER ANY OBLIGATION OR LIABILITY NOT STRICTLY IN ACCORDANCE WITH THE FOREGOING.

DECLARATION OF CONFORMITY

Manufacturer: Bird Electronic Corporation
30303 Aurora Road
Cleveland, Ohio 44139-2794

Products: Antenna Cable Monitor

Models: All active models per Bird Electronic Corp. and Table 1.

Table 1: Model Configuration Options

ACM	Frequency	Input Connector	Output Connector	Sample Connector	Voltage
ACM -	L0, L1, L2, M, or H	NM, NF, DM, or DF	NM, NF, DM, DF	N, T, B	L, or H

The undersigned hereby declares, on behalf of Bird Electronic Corporation of Cleveland, Ohio, that the above referenced products, to which this declaration relates, are in conformance with the provisions of the following standards.

- European Standard EN 61326:1997 + Addendums A1:1998 and A2:2001 – Electrical Equipment for Measurement, Control and Laboratory Use – EMC Requirements
- European Standard EN 61010-1:2001 – Safety Requirements for Electrical Equipment for Measurement, Control and Laboratory Use

These standards are in accordance with EMC Directive (89/336/EEC) and Low Voltage Directive (73/23/EEC), 1973 Including Amendment (93/68/EEC), 1993

The technical documentation supporting compliance with these directives is maintained at Bird Electronic Corporation, 30303 Aurora Road, Cleveland, Ohio 44139



Bob Gardiner
Director of Quality
Bird Electronic Corporation